

NOW AVAILABLE FROM FPD DEALERS

FIND A DEALER NEAR YOU AT FARRIERPRODUCTS.COM/LOCATIONS

Kerckhaert Kings ES Plus High Goal Polo Shoes

The new Kerckhaert Steel Kings ES Plus High Goal Polo shoes are now available to be ordered. The ES Plus High Goal Polo shoe retains all the popular features of the Kings Extra Sound Polo, including front and hind shape, toe clips, precise punching and nail fit. The new shoe has the addition of a thicker section of material to give improved grip and traction. The heels are more upright and have a wider bearing surface, giving the hoof more support.



All these features give polo ponies more confidence when playing at high speed. The Extra Sound Plus High Goal Polo shoe has easy to fit shapes for shoeing either hot or cold, and comes with a pre-drilled 3/8" stud hole in the hind shoe. Size 4 through 7, race plate sizing.

Liberty 10 Lite


The Liberty 10 Lite Nail is a popular nail for farriers shoeing the Saddlebred, Morgan and other gaited breeds. It is also a good choice for draft horse farriers. Packed in 250pc boxes.



FootPro™ DIM THE ONLY IMPRESSION MATERIAL YOU NEED

- Dental grade two-part silicone
- Easy to mix two equal parts by hand
- Wide mouthed jars

FootPro™ DIM Impression Material is a non-toxic, non-allergenic, dental grade silicone that is hand mixed to a moldable consistency and applied to the bottom of the equine foot with a pad to provide either a soft cushion (DIM20), or a firm supportive material (DIM40) when needed. Each box contains a total of either 4 lbs. or 2 lbs. (Equal Parts Catalyst and Base). Components are not sold separately.

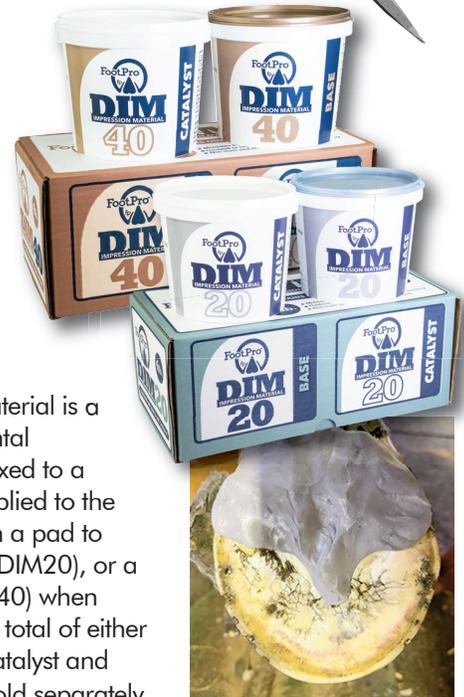

August 2022 FPD Facebook 20+2 Giveaway Drawing

For the August Facebook Giveaway two winners will receive a FootPro Hoof Buffer and one bottle of Diamond Hoof Defender. Twenty winning names will be drawn for a 3M Sand Block and one bottle of Diamond Hoof Defender. **Look for posts on FPD's facebook page to register for a chance to win the monthly free give-away. This giveaway is only valid in the U.S. and Canada.**



20+2

GIVEAWAY

DRAWING

DEADLINE TO ENTER 8/31/22. No purchase necessary. 22 names will be drawn 9/7/22, only valid in the U.S. and Canada. FPD, Inc. and Diamond Hoof Co. Employees and Dealers not eligible to win.



august

20 WINNERS RECEIVE
(1) 3M Sand Block
(1) bottle of Diamond Hoof Defender

PLUS PACKAGE 2 WINNERS RECEIVE
(1) FootPro Hoof Buffer
(1) bottle of Diamond Hoof Defender

What Happens When Hoof Care is Neglected



Fast forward to March of 2021. We contacted the owners to see if they would like to bring the horse back to the FootPro Shop to be shod by Hank Chisholm, CJF. We had no idea that she had not been done since July of 2020. You can imagine our surprise- and Hank's- when she walked into the shop. You can see from the images that the wall had grown considerably in the months since she was in the shop but she had not received any farrier care and a large area of the lateral wall of the right foot was broken off. What was still there was undermined and significantly detached. The sole was also undermined and had cracks and separation that were going to require extra care. Hank wasn't rattled, he just knew this was going to be a tedious shoeing job that was going to take some time to get things back on track.

In July of 2020, we had a horse come in the FootPro Shop that proved to be a good example of what can happen when hoof care is not done on a regular schedule.

Dave Farley, CF APF-I came to the shop to talk about the evaluation process he follows before shoeing his horses. It was obvious the feet had not been trimmed for some time, indicating no farrier had been scheduled to keep them in reasonable shape.

Beyond the excessive growth, Dave could see immediately she had a problem with her right front that needed to be dealt with. The owner told Dave the horse had just popped an abscess a few days before coming to the shop. In examining the size of the break in the hoof wall, it seemed likely a considerable amount of wall undermined as the abscess worked its way up the wall. There were also indications the sole had been compromised, as well.

Dave was able to get the foot trimmed, treated with FootPro CS+ and a shoe applied, despite the discomfort the abscess caused. He recommended the owners ask their vet how to treat the open wound and to make sure to follow up with a local farrier. The abscess appeared to have been ongoing for some time to cause this amount of wall separation and the poor condition of the hooves indicated she had not had any recent farrier work done either. The question was whether that neglect would change.

Have a look at the images from 2020 when the abscess first caused damage to the wall and the work Hank went through to get this horse back on a good path. This may be a good article to share with your clients that don't stick to a good schedule. Perhaps they'll understand why it's important for the health of the horse to work with you to get a reasonable schedule set up.

We had Bobby Menker, CJF APF-I come to the shop for two follow-up shoeings on this horse after Hank got her on track for recovery. The hoof is almost completely grown back and in a cycle or two, she should be as good as new.

Let's all hope the owners learned how important it is to keep a regular schedule for her hoof care, whether it's just to be trimmed or to be shod.

The work that Dave, Hank and Bobby did is documented in video footage that you can see on our YouTube channel, [YouTube.com/farrierproducts](https://www.youtube.com/farrierproducts). ■



July 2020 - Annabelle before trim.



March 2021 - missing wall and lateral Toe quarter undermined.



July 2020 - sole area. Note indications of abscess in toe area.



July 2020 - shod with Diamond Tracker Shoe.



March 2021 - Hank starts to investigate damaged wall.



March 2021 - sole pared and some damaged wall removed to begin trim.



March 2021 - rasping outer wall to get indication of true shape.



March 2021 - additional wall resection and clean up, removing anything not attached or healthy.



March 2021 - using Dremel tool to get final clean up at juncture of wall and laminae.



March 2021 - using heat gun to dry area to be patched after shoe has been applied.



March 2021 - applying first layer of Adhere.



March 2021 - application of second and third layer.



March 2021 - Vettec Equi-Pak applied to provide support and protection.




March 2021 - Vettec Adhere dressed before final nails are driven.



March 2021 - nails driven through material, ready to clinch.



March 2021 - after clinching, note the ledge of material at top to help with bond.

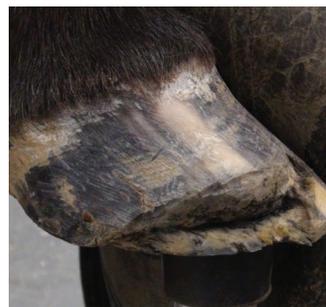

By late April 2021 hoof is growing down and a much smaller area requires the Adhere patch.



In June 2021 reset, very little patch needed to fill void in toe quarter.